beyerdynamic

Free BYRD

True Wireless Headphones

DISASSEMBLY INSTRUCTIONS TO REMOVE THE BATTERY

- PROFESSIONAL STAFF ONLY -

1.	Introduction	3
2.	Information for Germany on disposal in accordance with the Electrical and Electronic Equipment Act (ElektroG) and the WEEE Directive 2012/19/EU	3
3.	Disposal of batteries	3
4.	Removing the battery	3

1. Introduction

In accordance with the Electrical and Electronic Equipment Act (ElektroG) and the European WEEE Directive 2012/19/EU, electrical and electronic equipment must be disposed of separately from household waste at the end of their life.

If the device is operated with batteries, these must be removed before disposal. If batteries are permanently installed in the device, they must be removed by professional staff for safety reasons.

These disassembly instructions show how to proceed.

2. Information for Germany on disposal in accordance with the Electrical and Electronic Equipment Act (ElektroG) and the WEEE Directive 2012/19/EU



The symbol of the crossed-out dustbin on the product, in the operating instructions or on the packaging means that electrical and electronic devices must be disposed of separately from household waste at the end of their life cycle.

- Always dispose of used equipment in accordance with applicable regulations.
- For the return of old equipment, batteries and rechargeable batteries, there are free collection points or a free return to beyerdynamic, as well as other acceptance points for reuse. The addresses are available at the local city or municipal administration.
- Dealers for electronic equipment are generally obliged to take back waste electrical/electronic equipment free of charge. This obligation also applies to sales via remote communication.
- For further information, please contact the local authorities or the dealer from whom the product was purchased.
- The consumer/end-user is responsible for the deletion of personal data on the waste electrical/electronic equipment.

3. Disposal of batteries



 Dispose of batteries separately after use from the product in accordance with applicable regulations. They must not be disposed of in household waste. The return is free of charge for consumers/end users.

 Before disposal, discharge and remove the batteries.

4. Removing the battery

Caution:

Before removal discharge the battery. For this product a non-destructive removal of the battery by the end user is not possible. Due to the safety risk, this activity may only be carried out by professional staff. Please contact beyerdynamic or consult independent professional staff.

Earbuds

- Discharge the battery before disposal.
 - Remove the earbuds from the charging case.



 
Remove the eartip.



Use a knife (cutter) to loosen the decorative cover all around.



 Remove the decorative cover.



Pull off the protective fabric by hand and loosen the PCB connections.

Loosen three screws on

the PCB.



Close the lid and loosen two screws to remove it.



- Lift the insert for the earbuds from the lower housing all around.



 
Remove the PCB and carefully remove the battery using a screwdriver.




Pull out the LED connection.



Cut the cable between the PCB and battery.



Pull off the holder and remove the light guide.

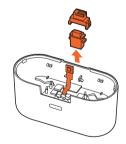

- Charging case
- Discharge the battery before disposal.
- Open the charging case and pull off the lid cover.



Loosen two screws on the PCB. Pull hard to remove the PCB with the battery. Cut the cable between the PCB and the battery.



CREATE THE AMAZING



beyerdynamic GmbH & Co. KG Theresienstraße 8 • 74072 Heilbronn / Germany Phone +49 7131 617-300 • E-Mail info@beyerdynamic.de www.beyerdynamic.com

For further distributors worldwide, please go to www.beyerdynamic.com Non-contractual illustrations. Subject to change without notice.

EN 1 / Free BYRD / (05.22)